
# ECHELON

## IzoT<sup>™</sup> U60 FT Network Interface Module

USB interface to LonTalk®/IP-FT and LON®-FT free topology twisted pair networks

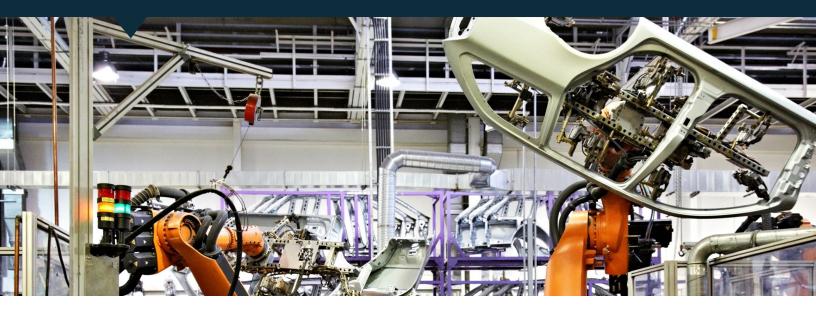

|--|--|--|

## IzoT U60 Key Features

- Provides a USB 2.0 to LonTalk/IP-FT or LON-FT interface for any controller or device
- Compatible with hosts implementing the IzoT Device Stack EX or applications requiring an ISO/IEC 14908-1 Layer 5 or Layer 2 interface
- Source code is available as a free download for a Linux-compatible driver
- Compact 72mm x 29mm (2.8" x 1.1") board-level form-factor with 2.54mm (0.1") center pin headers for simple integration
- Pin-header USB interface to the host
- Pin-header network connector
- Transmit and receive signals provided for driving host indicators
- Service signal provided for driving a host Service indicator
- Powered by a 3.3VDC input

#### **USB** Network Interface

Add a LonTalk/IP-FT or LON-FT interface to your controller. The IzoT U60 FT Network Interface Module is a compact 72mm x 29mm (2.8" x 1.1") board-level module with USB interface that can be easily integrated into any controller or device.

The U60 FT module is compatible with the LonTalk Device Stack EX which provide source code for LonTalk/IP and native LON compatible protocol stacks. It is also compatible with host applications requiring an ISO/IEC 14908-1 Layer 5 or Layer 2 interface.

Tx and Rx signals are provided on the U60 connector so that the host controller can provide transmit and receive indicators.

A Service signal is provided on the U60 connector so that the host controller can provide a network Service indicator.

Three 2.54mm (0.1") center pin-header connectors are provided by the FT network, USB, power input, transmit/receive signals, and service signal. Pin assignments are listed in the following tables.

# 🗲 ECHELON'


<ul> <li>JP1 Pin Assignment</li> </ul>		
• Pin Number	• Signal Name	
• 1	• Do Not Connect	
• 2	• USB -	
• 3	• USB +	
• 4	Ground	

• JP3 Pin Assignment		
• Pin Number	• Signal Name	
• 1	• +3.3V In	
• 2	• Tx LED Out	
• 3	• Rx LED Out	
• 4	Service	
• 5	Ground	
• 6	• Reset	

<ul> <li>JPX5 Pin Assignment</li> </ul>		
• Pin Number	• Signal Name	
• 1	• FT Network B	
• 2	• FT Network A	
• 3	• Do Not Connect	
• 4	• Do Not Connect	

## **Host Interface**

The interface to the host is provided via the USB interface. The host selects whether the interface is a Layer 2 or Layer 5 interface. Source code for a Linux-compatible driver is available as a free download.

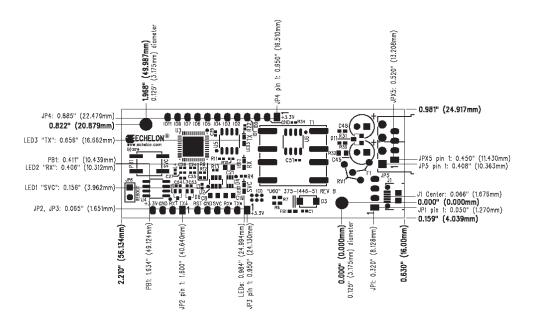

## Specifications

## Hardware Platform

#### Dimensions

72mm x 29mm x 13mm (2.8" x 1.1" x 0.5")

#### Processor

Echelon FT 6050 Smart Transceiver

#### Processor System Clock

80 MHz

Connectors

LonTalk/IP-FT and LONWORKS-FT (ISO/ IEC 14908-2) network pin header

#### USB 2.0 pin header

Service, Tx/RX signal, and +3.3V input pin header

#### Indicators

Service LED

FT Tx/Rx LEDs

**Operating Input Voltage** 

## 3.3VDC

#### **Operating Input Current**

110mA maximum

#### Temperature

-40°C to +70°C (operating and non-operating)

#### Humidity

10% to 95% RH @ 50°C

#### EMC

FCC Part 15 Class A compliant

EN55022 Class A and EN55024 compliant

#### CISPR 22 Class A compliant

#### Software Platform

#### Interface

LonTalk/IP or LON-FT with a Layer 2 or Layer 5 interface

#### Driver

Linux source code for a U60 network driver is available as a free download

#### **Ordering Information**

Model 65440R U60 FT Network Interface Module



© 2014 - 2015 Echelon, LON, LonWorks, LonTalk, and the Echelon logo are trademarks of Echelon Corporation registered in the United States and other countries. IzoT is a trademark of Echelon Corporation.